



**SEAWARD**  
ELECTRICAL SAFETY TESTING  
& MEASURING.

## How do I locate the serial number on my PrimeTest?

The serial number is located inside the battery compartment, under the batteries. Please remove the batteries to view your serial number.

If you require more help, please contact us at <https://www.seaward.com/sitemap/enquiry/>.