



## What does the “STOP” message indicate on the PrimeTest 250+?

When performing a powered leakage test on the PT250 / PT250+

With the power lead connected to the mains you select the “LKGE” button when ready to perform the “ILEAK” test – if not, the instrument will display “STOP” and not complete the test.

*Note if the unit is not plugged into the mains it will automatically perform the battery powered Substitute Leakage test at 40Vac.*

If you require more help, please contact us at  
<https://www.seaward.com/cms/enquire/>.