



**SEAWARD**  
ELECTRICAL SAFETY TESTING  
& MEASURING.

## **There's no figure for Irradiance showing on my Survey 200R, just three lines?**

The Survey 200R can only read Irradiance above  $100\text{w}/\text{m}^2$ . Below this level, the display will read "-- --". Usual cause of this is bad weather or heavy cloud. If it's a bright day, replace batteries and re-check.

If you require more help, please contact us at <https://www.seaward.com/sitemap/enquire/>.