



**SEAWARD**  
ELECTRICAL SAFETY TESTING  
& MEASURING.

## **I've paired my PV\*\*\* and my Survey 200R, but can't see the Irradiance on the PV 200?**

Put the Survey 200R into "transmit" mode, by holding down button 1 and 4 together on the Survey 200R, to get a flashing triangle in the bottom left corner of the Survey 200R display. As long as the testers are in range, and the Irradiance is greater than 100w/m<sup>2</sup> it will appear in the top right corner of the PV 200 display.

If you require more help, please contact us at <https://www.seaward.com/gb/enquire/>.