



**SEAWARD**  
ELECTRICAL SAFETY TESTING  
& MEASURING.

## My PV 200/210 is displaying a “FUSE” error message?

In most cases this means the fuse in the battery compartment has blown. Usual cause of this is pressing the AUTO test button when the tester is detecting more than 30V leaking back to Earth. Replace fuse with correct item from Seaward (part number 27B137).

If you require more help, please contact us at <https://www.seaward.com/gb/enquire/>.