



**SEAWARD**  
ELECTRICAL SAFETY TESTING  
& MEASURING.

## Where can I find the serial number on the PrimeTest 50?

The serial number is located underneath the batteries in the back of the tester.

If you require more help, please contact us at <https://www.seaward.com/gb/enquire/>.