



**SEAWARD**  
ELECTRICAL SAFETY TESTING  
& MEASURING.

## What does TABLE on the display of the PrimeTest 250 mean?

This means the appliance has failed on earth continuity but this is probably down to the length of the supply cable. Please calculate the cable resistance using the table from the Code of Practice or our Guide to PAT Testing available from the below link.

<https://www.seaward.com/gb/support/guides/pat-testing/cb77a-portable-appliance-testing-a-practical-guide/>

If you require more help, please contact us at

<https://www.seaward.com/gb/enquire/>.