



**SEAWARD**

TESTED. TRUSTED... WORLDWIDE.

# D255

# USER MANUAL



## Limited Warranty & Limitation of Liability

Seaward Electronic Ltd guarantees this product for a period of 1 year. The period of warranty will be effective at the day of delivery.

### Don't forget to register...

Register your product today to activate your warranty and other benefits.

Visit [seaward.com/register](https://seaward.com/register) or scan the QR code to register your product today.



© Copyright 2024

All rights reserved. Nothing from this edition may be multiplied, or made public in any form or manner, either electronically, mechanically, by photocopying, recording, or in any manner, without prior written consent from Seaward. This also applies to accompanying drawings and diagrams.

### E&OE

The information contained within this manual is given in good faith and is provided for guidance only. Although all reasonable care has been taken to ensure accuracy of the information, Seaward Electronic Ltd, their agents and distributors, accept no responsibility for any errors or omissions within this document, nor for any misinterpretations by the user. For clarification on any part of this document please contact Seaward Electronic Ltd, or your local agent, before operating the instrument.

Due to a policy of continuous development Seaward Electronic Ltd reserve the right to alter or amend equipment specifications and descriptions outlined in this publication without prior notice. No part of this publication shall be deemed to form, or be part of, any contract for the equipment unless specifically referred to as an inclusion within such contract.

### Disposal of old product



This product has been designed and manufactured with high quality materials and components that can be recycled and reused.

When this symbol is attached to a product it means the product is covered by the European Directive.

Please familiarise yourself with the appropriate local separate collection system for electrical and electronic products.

Please dispose of this product according to local regulations. Do not dispose of this product along with normal waste material. The correct disposal of this product will help prevent potential negative consequences for the environment and human health.

### User Notes



**These Operating Instructions are intended for the use of Competent Personnel.**

<b>1. General Guidance Notes</b>	<b>5</b>
1.1. Safety	5
1.2. Safe Application of Test Equipment	6
1.3. Maintenance	7
1.4. Summary of Safety Information	7
<b>2. Environmental Conditions</b>	<b>8</b>
<b>3. Introduction to Safety Testing</b>	<b>9</b>
3.1. Methods of Construction for Electrical Safety	9
3.2. Test Requirements to Determine Electrical Safety	10
3.3. Visual Inspection	10
3.4. Electrical Safety	10
3.5. Earth Bond Continuity	10
3.6. Electrical Insulation	11
3.7. Powered Leakage Current	11
3.8. Functional Operation	12
<b>4. Introducing the D255</b>	<b>13</b>
4.1. Fascia Controls	13
4.2. Accessories	14
4.3. Rear Panel Connections	15
<b>5. Set-Up Procedures</b>	<b>16</b>
5.1. The Test Area	16
5.2. Instrument Wiring and Connections	17
5.3. Instrument Set-Up	18
<b>6. Test Application</b>	<b>19</b>
6.1. Visual Inspection	19
6.2. Casing	19
6.3. Supply Lead	19
6.4. Plugs and Fuses	19
6.5. Switches and Function Selectors	20
6.6. Electrical Safety Tests – General	20
6.7. Earthed (Class I) Equipment – Earth Test	20
6.8. Flash Test – Line+Neutral to Earth	22
6.9. Double Insulated (Class II) Equipment	23
6.10. Flash Test – Line+Neutral to Probe	24

<b>6.11. Protective Conductor Current (Earth Leakage) Test - (Class 1 Earthed/Grounded Products)</b>	<b>26</b>
<b>6.12. Touch Leakage Test (Class 2 Double Insulated Products)</b>	<b>26</b>
<b>6.13. Load (Run) Current Measurement</b>	<b>29</b>
<b>6.14. Fault Indication</b>	<b>30</b>
<b>7. Instrument Integrity</b>	<b>31</b>
<b>7.1. Calibration</b>	<b>31</b>
<b>7.2. Operational Checks</b>	<b>31</b>
<b>7.3. Check Procedure – Earth Continuity</b>	<b>31</b>
<b>7.4. Check Procedure - Flash Test Trips</b>	<b>32</b>
<b>7.5. Check Procedure – Instrument Operation</b>	<b>32</b>
<b>8. Specifications</b>	<b>34</b>
<b>8.1. Technical Specifications</b>	<b>34</b>
<b>9. Maintenance</b>	<b>35</b>
<b>10. Cleaning</b>	<b>35</b>
<b>11. Additional Information</b>	<b>35</b>
<b>11.1. Useful Reference Material</b>	<b>35</b>
<b>11.2. Training</b>	<b>36</b>
<b>14.1. Contact Us</b>	<b>36</b>

# 1. General Guidance Notes

## 1.1. Safety

The user **MUST** follow the remainder of this section on safety, installation, guidance and maintenance to guarantee safe operation and to maintain the equipment in a safe condition.



**Any interruption of the protective earth conductor (mains input earth) inside or outside the equipment is likely to make the equipment dangerous. The user must not intentionally interrupt the protective earth conductor!**

When connected to the mains supply, internal terminals of the equipment may be live and the opening of covers or removal of parts is likely to expose live parts. The user must disconnect the equipment from **ALL** voltage sources before any adjustment, replacement, maintenance or repair.



**Caution, risk of electric shock. Indicates instructions must be followed to avoid danger to persons.**



**Caution, risk of danger. The operating instructions must be adhered in order to avoid danger.**



**Do not touch equipment under test during tests!**



**Always use D255 with accessories and cable assemblies provided.**



**If the D255 is used in a manner not specified by this document then the protection provided by the equipment may be impaired.**

## 1.2. Safe Application of Test Equipment

Any person operating electrical test equipment should be 18 years or over and should have had adequate training in the use of the particular piece of equipment. The degree of training should be appropriate for the competence and experience of the operator.

Position the test equipment in a clearly defined test area with access limited to the operator only. Construct all test benches of insulated material, preferably wood. Avoid the use of conductive benches, unless covered in insulating material.

The item under test must be on an insulated surface (where possible, as with large or unwieldy items this may not be possible).



**Do not touch or come into contact with the instrument case or any other Earthed metalwork (for example conduit or metal trunking, etc.) whilst applying the safety tests. The operator should also be on an insulated surface such as British Standard approved rubber matting.**



**The item under test must not be touched whilst the flash tests are applied.**

This instrument incorporates an ac Flash trip device that defaults to 5mA. The trip mechanism operates within 10 milliseconds to safeguard the operator and make the flash test non-lethal and non-destructive.

### 1.3. Maintenance

Seaward Electronic Ltd supplies a guarantee against defective material and faulty manufacture for a 12-month period from the date of delivery.

Prior to despatch the equipment undergoes careful inspection and comprehensive testing. Report any defect discovered with the equipment in respect of materials or workmanship within the guarantee period. We undertake to put right the defect at our expense subject to our standard conditions of sale.

Our responsibility is limited, in all cases, to the cost of making good the defect in the equipment. This does not apply to defects caused by abnormal conditions of working, accident, misuse, neglect or wear and tear.

Please take adequate care with packing and arrange insurance cover against transit damage or loss when returning the instrument – if possible, use the original packing box and supports.

Regularly calibrate all test equipment to meet internal quality or regulatory licensing authority requirements and to keep the equipment in a safe working condition. Return the equipment to Seaward Electronic Ltd for this purpose.

Keep the equipment in a clean condition. Examine all input and test output leads and connectors regularly to guarantee they are in a safe working condition.

The equipment contains parts that are specific to the equipment only, therefore, order spare parts from the address on the previous page. Seaward Electronic Ltd strictly forbid any use of spare parts, other than those acquired from the original manufacturer.

### 1.4. Summary of Safety Information

Should there be any doubt about location, setting up procedure or operation of the test equipment, contact Seaward Electronic Ltd. Report any apparent malfunctions immediately.

Maintain the test equipment in accordance with Health and Safety at Work Act and the Electricity at Work Regulations.

**Note:** Your Health and Safety Inspector may, with the benefit of on-site observations, offer alternate or additional instructions to the above recommendations.



## 2. Environmental Conditions

The D255 has been designed to perform test and measurements in a dry indoor environment.

Maximum barometric elevation at which measurements can be recorded is 2000m.

Contamination degree 2 according to IEC 61010-1.

Overvoltage Category II

Protective system IP40 according to IEC 60529.

Supply rating is specified as 230VAC +10% - 6%, 50Hz/60Hz 16A.

Electromagnetic compatibility (EMC). Immunity and emissions interference conform to BS EN 61326-1.

**Note:** The D255 product meets the requirements of EN61326-1 Performance criterion A. It is possible that when the D255 is subjected to an Electromagnetic field that the displayed Leakage measurements may increase above the actual leakage value, this may lead to a EUT failing a test where it would otherwise pass. It is not possible for the Leakage measurement to reduce leading to an incorrect pass. This is within the Seawards permissible performance loss levels.

Operating temperature range of 5°C to 40°C without moisture condensation.

The D255 can be stored at any temperature in the range -25°C to +65°C (relative humidity up to 90%).

### 3. Introduction to Safety Testing

Under the requirements of the Health and Safety at Work Acts it is the responsibility of the 'supplier' of electrical equipment to ensure that it is electrically safe. The 'supplier' can be the Manufacturer, the Importer or the Hirer and by inference the Repairer.

Manufacturers and Importers generally satisfy their obligations by ensuring conformity to the relevant safety standards prior to placing the equipment on the market and have little or no further interest in the continuing in-service maintenance and routine testing of the product other than in responding to customer feed-back and enquiry.

The Hire Industry however must ensure compliance with safety regulations each and every time a power tool or appliance is hired out.

Repairers of power tools and appliances also have statutory obligations to ensure that the repaired item complies fully with original manufacturer's specifications and the relevant standards.


As well as being aware of the legal requirements it also helps to appreciate the reasons for testing if there is a clear understanding of how construction and test requirements aim to provide 'Electrical Safety'

#### 3.1. Methods of Construction for Electrical Safety

To provide the user with protection against electric shock, general methods of construction must ensure firstly that all 'live' parts are insulated and secondly that should this basic insulation fail the 'live' parts are prevented from creating a hazard to the user.

This second level of protection is achieved either by 'earthing' all accessible conductive surfaces or by providing 'double insulation' in the form of a second insulating layer or by reinforcing the primary insulating layer.

Earthed equipment is referred to as Class I. Earthing is achieved by connecting all accessible conductive surfaces (the tool body or outer casing and associated fixings etc) to the supply earth via a low impedance protective conductor. Then if any 'live' part comes into contact with these surfaces the hazardous current is drawn harmlessly to earth through the protective conductor rather than the person holding the tool. The protective conductor is the green/yellow 'earth' wire in standard 3 core mains supply leads.

Double Insulated equipment is referred to as Class II. All accessible conductive surfaces are additionally insulated from internal 'live' parts and components. No 'earth' wire is present in the supply lead. All such equipment is clearly identified by a prominent square within a square symbol: 

### 3.2. Test Requirements to Determine Electrical Safety

The most appropriate way of verifying Electrical Safety is to carry out a series of routine Safety Tests that both reflect those tests used in the manufacturing process and, particularly in the Hire Industry, taking into account the effects of normal wear and tear.

### 3.3. Visual Inspection

It is important when carrying out routine testing to first check for signs of undue wear and tear by a thorough visual inspection – a nick in the supply cable or a cracked casing for example, can easily lead to hazardous situations when the power tool or appliance is in use.

### 3.4. Electrical Safety

The tests to verify satisfactory 'earth bonding' and insulation levels will depend on;

- a. The basic construction of the tool – Class I/Earthed or Class II/Double Insulated and
- b. The original standard that it was manufactured to – the most common British Standards relating to equipment used in the Hire Industry being BS EN 62841 Electric motor-operated hand-held tools, transportable tools and lawn and garden machinery (Replacing BS EN 60745) and BS EN 60335 for general household appliances, however clear guidance should be sought from the manufacturer, or importer, to determine appropriate requirements.

**Note:** Guidance for appropriate testing can also be found in the Hire Association of Europe's document, Guidance for Electrical Safety Testing in the Hire Industry.

### 3.5. Earth Bond Continuity

Most type testing standards, including those referred to above, require that the earth bond resistance between all accessible conductive surfaces and the 'Earthing' terminal within the item, does not exceed 0.1 Ohm. Compliance is typically checked by resistance measurement using a test current between 10A and 25A, from an a.c. voltage source not exceeding 12V.

In practice, routine testing will always include the supply lead and the measurement will be made between the earth pin of the supply plug and exposed metal (conductive) surfaces of the tool.

As a generalisation, many power tools will still meet the 0.1 Ohm limit, and an earth bond resistance above 0.1 Ohms may still be acceptable when considering the cross-sectional area and lead length of the supply cable. In this instance a test limit of  $0.1 + R$  can be applied.

Where  $R$  = Resistance of the supply cable.

**Note:** Where exposed metal parts cannot be seen to form a continuous surface with all other exposed metal, such as a metal grille in a plastic housing or a remote switch panel, OR where moving guards or detachable accessories are also made of metal, measurements must be taken from all surfaces back to the Earth pin of the plug top.

### 3.6. Electrical Insulation

To check the insulation, between the 'live' conductors (Line and Neutral) and all exposed metal surfaces, a high voltage a.c. Flash Test can be applied. The voltage will depend on the construction class of the tool or appliance:

**500V or 1250V\*** for testing Class I (Earthed) tools and appliances

**3000V\* or 3750V** for testing of Class II (double insulated) equipment

\*Most common test voltages.



**Caution! 230V and 110V test sockets are also used as sources of flash test voltage. Do not touch while testing**

Under normal conditions the leakage current at the appropriate Flash Test voltage should not exceed 5mA

Some Class I equipment may suffer from the effects of high capacitive leakages associated with exceptionally long supply leads or certain methods of suppression filtering, or a combination of the two. Under these conditions a reduced test voltage of 500V or an increased leakage level of up to 10mA may be permissible – if in doubt advice must be sought from the equipment manufacturer.

All safety tests must be carried out with the supply switch of the tool or appliance in the ON position to ensure that all 'live' parts are included when checking insulation. Multi-function tools and appliances must be FULLY tested with supply and function switches set for each operating mode.

### 3.7. Powered Leakage Current

For equipment fitted with contactor, relay or low voltage 'electronic' start switching devices (often referred to as 'dead mans handles'), typically those that require mains voltage to be applied before all operating circuits are made, it may be impractical to apply a Flash Test to the complete wiring system of the product. In such cases it may be more appropriate to measure the Powered Leakage current when the equipment is powered up and running.

The powered leakage test can be performed in two ways

Protective Conductor Current – Typically performed on Class I equipment. This required no use of test leads other than the mains supply cord from the unit under test. Any leakage current through the earth conductor is measured and displayed on the D255.

Touch Leakage Test – This is typically performed on Class II equipment and requires the Earth Clip to be repositioned from the rear of the D255 to the dedicated 4mm socket on

the Outlet box. The clip is placed onto metal surfaces and any current flowing back into the D255 via the clip is measured and displayed.



**Caution!** Device under test will be operational, take precautions to ensure no harm can be caused by the equipment under test operating, for example, cutting parts or heat.

### 3.8. Functional Operation

Having established that the tool or appliance offers adequate protection to the user it is also necessary to ensure that it operates correctly in all available modes.

Although many tools and appliances can be seen to be working correctly, in that they turn in the right direction or heat when required etc. such visual checks do not always tell the full story or give any indication of impending failure. It is therefore recommended that measurements are also made to determine the load currents of each function to check that they are within the normal operating limits.

For motor driven tools such as drills, saws and angle grinders etc., the current measurement is usually taken with the tool running in an 'off-load' condition. This will generally give load current readings significantly lower than that shown on the equipment rating plate, which is the maximum 'on-load' current.

The advice of the equipment manufacturer should be sought for meaningful current values for all functions including 'off-load' running. The manufacturer can also sometimes provide useful tips and hints as to the probable causes for out-of-limit readings. A satisfactory 'load test', as well as showing that the tool runs or operates, also acts to validate the preceding Flash Test by proving that the supply switch was ON and the circuit complete.

## 4. Introducing the D255

### 4.1. Fascia Controls

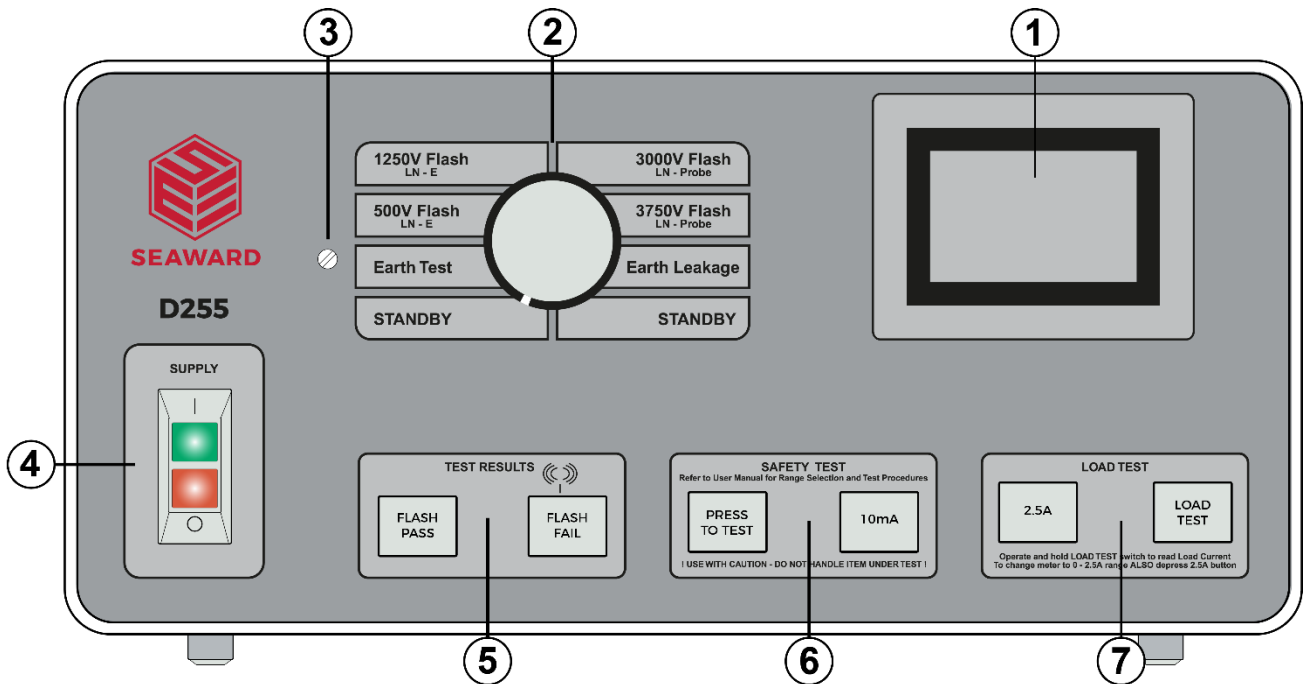


Figure 1: Fascia Controls

1. **Display Meter** – Digital Display meter to show measured values for Earth Resistance, Current and Leakage Current. Will also display status of Flash test.
2. **Test Selector** – a rotary switch for selecting the required test. When connecting or disconnecting items to be tested OR when the instrument is to be left un-attended or tests are not being applied, always set this switch to one of the **STANDBY** positions, the test buttons are then disabled.
3. **Adjust Control** – used for setting the scale indication of the meter to compensate for mains fluctuations or differences from location to location. Please refer to Set-Up Procedures for adjustment details.
4. **Supply Switch** – an illuminated two-button device for controlling the incoming supply to the instrument. Firmly depress the upper green button to turn the instrument **ON**, (button illuminates) and the lower red button to turn it **OFF**. This switch also acts as a miniature circuit breaker (MCB) to protect internal wiring.
5. **Flash Test Result indicators** – a green PASS lamp and red FAIL lamp indicate test status whenever any of the Flash tests are applied, a flash fault is also indicated by a high-pitched audible alarm.
6. **Safety Test buttons** – the white, momentary action, **PRESS TO TEST** button is used to apply the selected Earth or Flash test. The adjacent, red, 10mA button can be used to increase the standard 5mA trip level for the 500V and 1250V LN-E tests only - this button must be depressed and held **BEFORE** the main **TEST** button is depressed.

**7. Load Test buttons** – the **LOAD TEST** button is used to apply mains voltage to the product under test and the resultant run current is displayed on the middle 0-25A scale. For readings below 2.5A the meter range can be expanded to read 0-2.5A full scale by also depressing the 2.5A button.

The **LOAD TEST** button is also used to apply a selected **EARTH LEAKAGE** test, which again requires the product to be powered.

## 4.2. Accessories

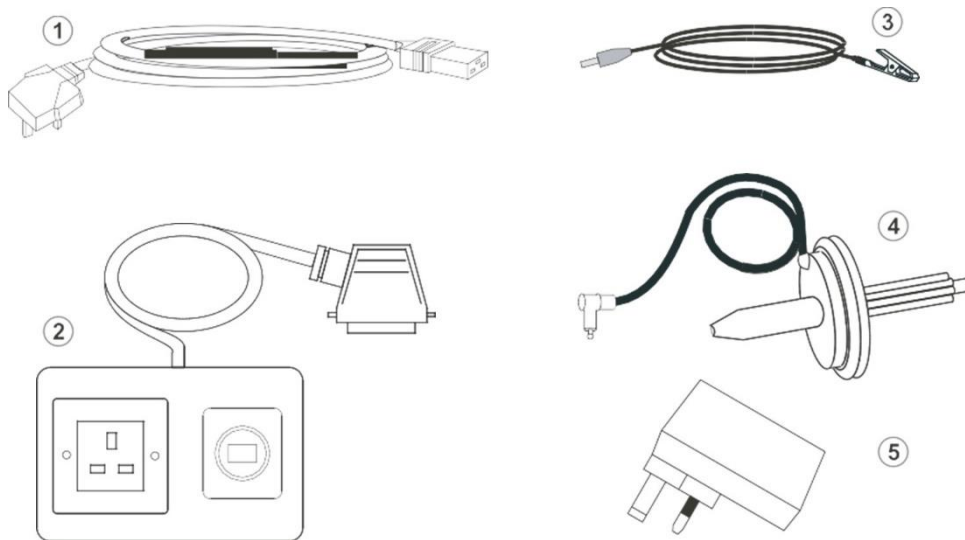


Figure 2: Supplied Accessories

- 1. Mains Lead** – fitted with a standard BS1363 square pin 13A plug top for connection to an Earthed supply outlet. It is also recommended that the outlet is fitted with an RCD protection device.
- 2. Test Output Socket Box** – the standard box is fitted with sockets to accept 230V / 13A and industrial 110V / 16A plugs. When testing 110V products, an external supply source will be required to carry out Earth Leakage and Load Current tests. Other connector combinations can be catered for, as optional extras and to special order.
- 3. Earth Return clip lead** – this green clip lead is used to complete the Earth Continuity test path when testing Earthed (Class 1) equipment – the lead is not required when testing Double Insulated (Class 2) equipment.
- 4. Flash Test Probe** – a high voltage safety probe for use when applying the 3000V and 3750V LN-Probe flash tests to Double Insulated (Class 2) products – the probe is not required when testing Earthed (Class1) equipment.
- 5. Fault Simulator** – used to check the correct operation of the Flash test trips and Earth Continuity measuring circuits. This simple to use device should be used on a regular basis, even daily, to ensure that the D255 continues to provide accurate safety test results. See under Operating Procedures for instructions.

### 4.3. Rear Panel Connections

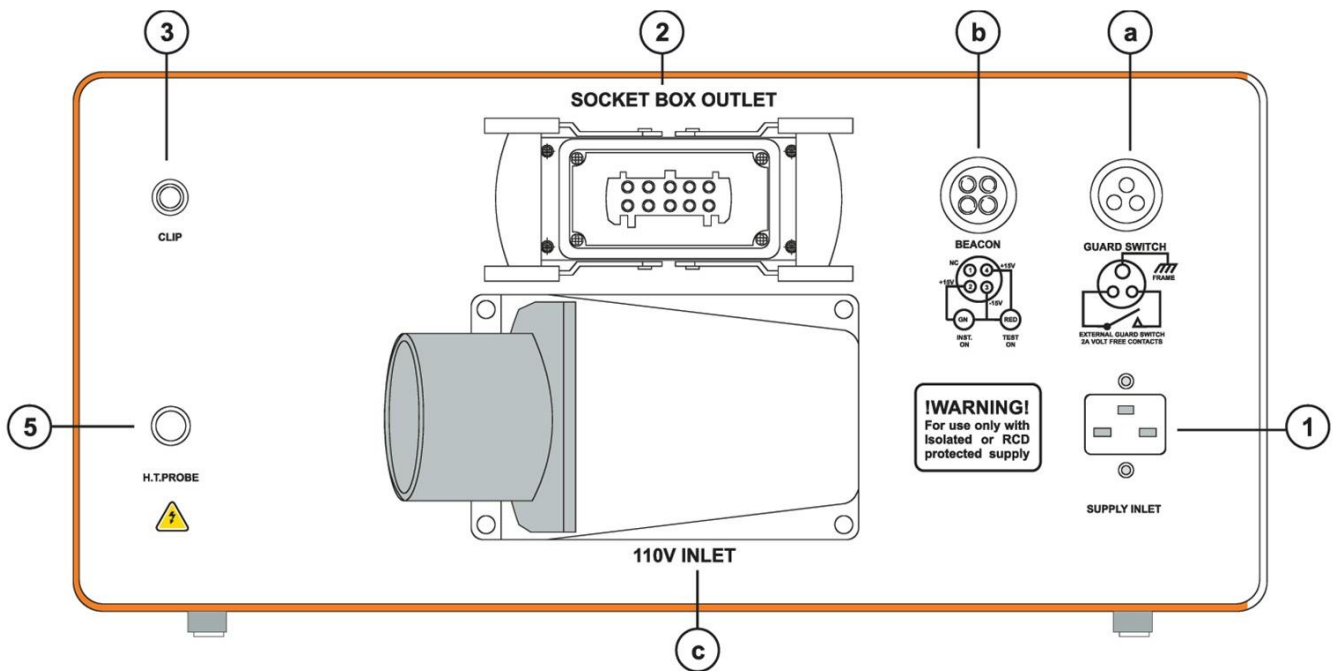


Figure 3: Rear Panel Connectors

The various connectors shown in the illustration opposite are numbered, where appropriate, to correspond with the accessories described on the preceding pages – other connectors are described below.

- a. Guard / Safety Switch** – used to connect the guard (door) switch from the Test Area barrier or other external safety interlock system – a mating plug top is supplied for wiring purposes. Switch contacts must be normally open, closing to start, and be volt-free but with a minimum rating of 2A / 24Vd.c.

As an alternative to the guard switch, a remote, manually operated Safety switch can be supplied as an optional accessory.

Where no guard or safety switch is to be used, a shorting link must be wired across the contact terminal pins.

- b. Beacon Port** – this socket can be used to connect any standard Green / Red, 2 lamp, safety beacon fitted with 24V 5W bulbs. The mating plug should be wired in accordance with the adjacent wiring diagram on the label. The beacon provides a visual indication of instrument status – Green light shows that the instrument is switched ON, with power on and safety interlock closed, and ready for test application. The Red light shows that a test is being applied.

A pre-wired status beacon can be supplied as an optional extra.

- c. 110V / 32A Inlet** – when applying Earth Leakage or Load Current tests to 110V industrial equipment, an external supply source is required. Any standard, single-phase, 240 / 110V safety-isolating transformer can be used, provided that it has a VA rating to suit the product(s) to be tested.



## 5. Set-Up Procedures

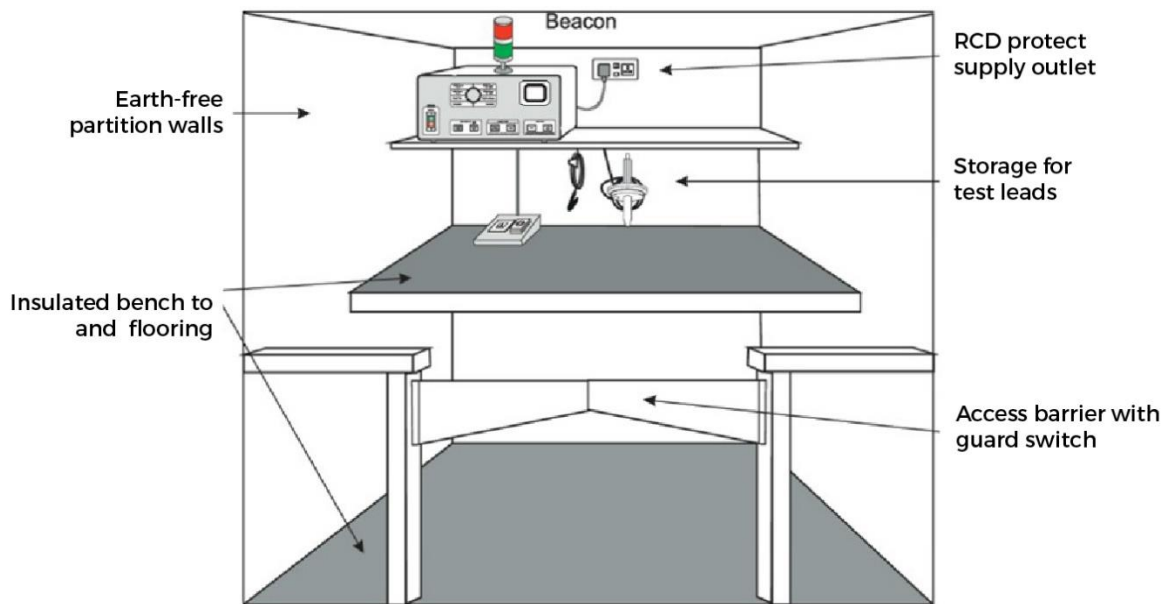


Figure 4: Suggested Test Area

### 5.1. The Test Area

Appliance testing can be hazardous and various common-sense precautions must be observed.



**Never come into bodily contact with an appliance being tested.**

Ensure that the 'test area' is clearly defined and offers limited access to persons other than the 'tester'. At the same time it is advisable to have somebody else in the near vicinity who can give assistance should anything go wrong.

Ensure that the appliance to be tested is on an insulated workbench – avoid the use of a metal bench – a robust wooden bench with a securely fitted rubberised worktop is best. The floor surface of the test area should also be insulated with rubber matting to provide protection to the operator and to permit larger equipment to be stood on the floor for testing. Walls and partitions should also be made of insulating materials.

Arrange the test bench so that test instrument controls can be operated without having to reach over or lean across the tool or appliance during testing. This is particularly important when testing motorised equipment such as drills and lawn mowers etc.

Ensure adequate warning to others that testing is in progress. The D255 is fitted with a beacon port, which can be used to drive a standard, 2 lamp, beacon (available as an optional extra). If used, this should be sited so that it can be clearly seen by other people in the immediate vicinity of the test area.

It is recommended that the supply sockets in workshops and especially those used in any 'test area', are protected by an Earth Leakage Circuit Breaker (RCD). Ensure that the person responsible for testing is competent and fully trained in both the general principles of Safety Testing and the correct use of the required test instruments, or is closely supervised by someone of the required competence.

Never leave an appliance connected to the test set when un-attended.

Always check that the intended test is suitable for the appliance – if the Class II (Double Insulated) symbol is not clearly visible the appliance must be assumed to be of Class I (Earthed) construction.

**IF IN DOUBT** refer to the appliance manufacturers recommendations or seek qualified advice.

## 5.2. Instrument Wiring and Connections

Site the instrument in accordance with the General Guidance Notes, and other recommendations elsewhere in this Manual, and to satisfy operator safety and ease of use.

Connect the Test Output box to the rear-mounted outlet on the instrument and site the connector box within the test area for easy access.

Wire your Guard Interlock / Safety switch circuit to the input socket on the rear panel, using the plug top supplied – if no safety interlock is to be employed, the plug must be fitted with a shorting link, otherwise the instrument won't work.

Wire your status beacon to the Beacon Port on the rear panel, again using the mating plug top supplied. Position the beacon so that it can be clearly seen outside the test area.

**Important:** To fully test 110V products, connect the output lead from an external 240 / 110V isolating transformer into the 110V Inlet connector on the rear panel of the instrument.

Connect the Earth Return clip lead and Flash test probe into their respective sockets on the rear panel. It is recommended that provision is made, within the test area, for storage of the clip and probe when not in use – rather than just leave them on the bench top.

### 5.3. Instrument Set-Up

Ensure that the rotary Test Selector switch is set to either of the two **STANDBY** positions.

Connect the supply lead into the Supply socket on the back of the instrument and connect to a protected, Earthed, 230V 50Hz, supply outlet.

Switch on the instrument by firmly depressing the green button on the front mounted **SUPPLY** switch, the green button will light and, if the status beacon is connected, the green beacon lamp will also light to warn that the test set is powered up.

The following set-up procedure may need the use of a small, flat bladed, screwdriver. It is used for setting the scale indication of the meter to compensate for mains voltage fluctuations or differences from location to location.

Ensure that the Y250 Simulator is plugged into the 240V Test Socket, and that the Earth Return clip lead is connected across the two metal tags on the simulator, set the rotary Test Selector to **EARTH TEST**.

Close the Guard switch if appropriate, the red beacon light (if used) will come on to warn that a test is about to be applied.

Depress the white **PRESS TO TEST** button and watch the reading on the digital scale. It should display a reading of 0.20 Ohms - if it does, no adjustment is necessary. Release the test button.

If the meter does not read 0.20 Ohms, keep the test button depressed and use a small, flat-bladed, screwdriver to adjust the **ADJUST** control (see FIG.1 Item 3) until the readout is correctly set. Release the test button.

Reset the test selector to the **STANDBY** position. The test set is now ready for test application.



Ensure the D255 is positioned so that the mains supply lead can be easily disconnected from the mains supply.

## 6. Test Application



Output box must be plugged into the equipment before use. The output box is required to enable equipment test functionality.



Before use confirm that the internal part of the interlock system functions correctly; Check 'Instrument Integrity' section for details.



Before use confirm the D255 functions correctly; Check 'Instrument Integrity' section for details.

### 6.1. Visual Inspection

Before applying any electrical test a thorough visual inspection of the appliance must be carried out.

### 6.2. Casing

Check for signs of undue wear, cracks or dents missing components such as guards, covers or hand grips etc.

Ensure that all screws and catches are present and secure.

Check for evidence of excessive dirt build-up, especially in and around any ventilation slots.

Also ensure that all movable guards operate smoothly.

### 6.3. Supply Lead

Check for any signs of damage or fraying along the entire cable length. This should also include any extension lead that may be regularly used with the appliance.

Ensure that any cable entry or connector is sound and secure.

### 6.4. Plugs and Fuses

Thoroughly check plug tops for damage and ensure that all wires are correctly connected.

Ensure that cable grips and strain relief bushes are properly secure.

Check that the correctly rated fuses are fitted.

## 6.5. Switches and Function Selectors

Ensure that all switches, including rotary selector devices, operate smoothly and in the expected manner.

Set supply switches to the ON position in preparation for the Safety Test. Multi-function appliances, such as a two heat/two speed heater, will require testing in each operating mode.

Any fault or irregularity found by the visual inspection must be corrected **BEFORE** electrical testing is carried out.

## 6.6. Electrical Safety Tests - General



Electrical safety testing can be dangerous. Ensure that you are aware of all potential hazards.

Plug the power cord of the product to be tested into the appropriate 230V/13A or 110V/16A socket on the Test Output Box. Various other test socket combinations can be supplied as optional extras or, alternatively, adaptors to convert the relevant socket to suit other equipment plug styles can be used if required.

If intending to apply Earth Leakage and Load (Run) tests to 110V equipment, ensure that a suitable external 110V safety isolating supply is connected to the 110V/32A Inlet on the back panel of the test set.

The D255 is mainly intended for single phase equipment but can be used for applying the Safety tests (Earth and Flash) to 3 phase equipment using appropriate adaptors, however this instrument **CANNOT** be used to apply the Leakage and Load (Run) tests to 3 phase equipment.

## 6.7. Earthed (Class I) Equipment - Earth Test

Set the Test Selector to the Earth Test position.

Attach the Earth clip lead (Fig 2. Item 3) from the instrument to clean exposed metal on the appliance. Good connections are essential for accurate measurement and to prevent any high current sparks occurring when the test button is depressed.

Depress and hold the **PRESS TO TEST** button for 5 seconds whilst observing the digital display for a readout of the resistance. For guidance on the potential safety of the item under test the bar graph is colour coded to identify readings that may need interpretation.

For most power tools and appliances, the bar meter reading may be below 0.1 Ohm (within the Green zone). Readings up to 0.5 Ohms (within the orange zone) may be acceptable - particularly when testing items with longer supply leads, although this may also be dependent on the cross-sectional area (csa) of the conductor being used.

To aid in recording the measured value, once the test button is released, the D255 will display the measured value for a period of 5 seconds, or until the test is restarted or the dial position moved.

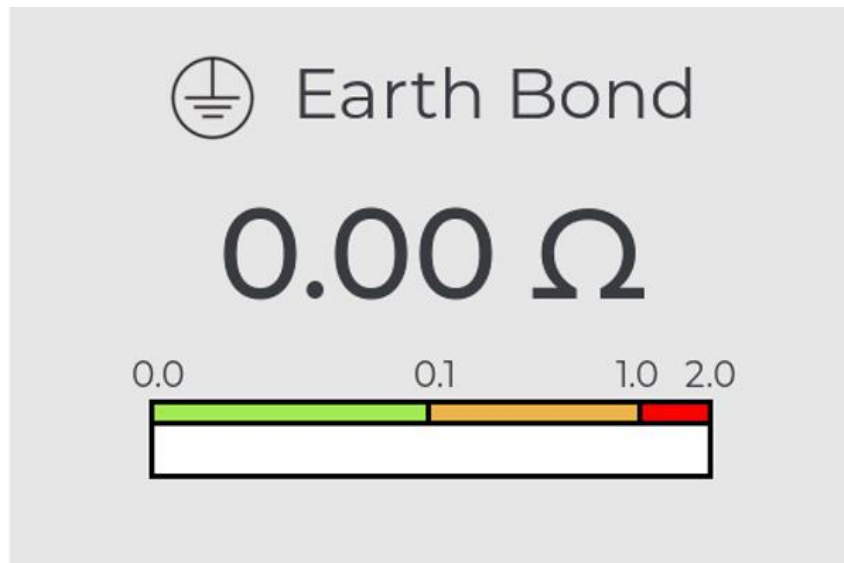


Figure 5: Earth Bond Test

Readings in the red zone usually mean that the Earth wiring of the product is faulty and should be investigated further.

Similarly, if the recorded readings show an increase in value from one routine test to the next, it may indicate a loose connection, corroded terminals, or partially broken Earth wire. Again, further investigation may be required.



**Any faults must be repaired or corrected before carrying out other tests.**



**The high Earth test current will cause a certain amount of self-heating, to both the appliance wiring and the test circuitry. To keep this within acceptable limits and prevent over-heating. Do not apply earth tests for more than 5 seconds or more than 2 tests per minute.**

**Note:** Where exposed metal parts do not form part of a continuous surface with all other exposed metal the Earth test must be repeated with the earth clip attached to each exposed metal surface in turn.

## 6.8. Flash Test – Line+Neutral to Earth

The supply switch of the tool or appliance must be in the ON position to ensure that all 'live' parts are included when applying a Flash test. For contactor or electronic start products refer to the Earth Leakage section.

For general guidance it is recommended to set the Test Selector to:

**1250V LN-E** for most normal equipment.

**500V LN-E** for heavily suppressed equipment.



**Flash testing can be hazardous - Do not touch the product under test.**

Depress the **PRESS TO TEST** button and observe either the digital display or the **TEST RESULT** lamps. The green **FLASH PASS** lamp should come on and remain illuminated for the duration of the test.

The Display will also indicate the test is in progress, until the button is released, at which point the display will show **HOLD** to indicate the test has finished. The result is held in the Pass or Fail state for a period of 5 seconds, or until the test is restarted or the dial position moved.

If the red **FLASH FAIL** lamp glows and the audible alarm sounds, one of the following conditions is indicated:

- a. The insulation is unsatisfactory, permitting a leakage current in excess of the nominal 5mA at test voltage,



Figure 6: 1250V LN-E Flash Fail



Figure 7: 500V LN-E Flash Fail

- b. A flash-over has occurred between the Earth path and one or other of the Line and Neutral paths;
- c. The presence of a high leakage suppression filter or high brightness neon in the supply circuit gives rise to a total leakage current more than the nominal 5mA at test voltage.

The appliance should be considered unsafe, clearly marked as such and withdrawn for full workshop investigation and repair. It must be **FULLY** re-tested following repair.

**Note:** Certain equipment may have inherently higher leakages which require a pass level of up to 10mA at test voltage.

If this is the case and provided that the manufacturer advises testing this to a higher threshold, the 10mA Flash trip can be employed.



**Testing in this 10mA mode increases the hazard to the operator, remember - Do not touch the item under test.**

To apply the Flash Test using the increased trip threshold, first depress the red 10mA button and hold it in, then also depress the white **PRESS TO TEST** button for 5 seconds, in the normal way.

The digital readout will indicate the trip limit has been changed to 10mA. The green **FLASH PASS** lamp should light. Release both buttons at the end of the 5 second test period.

If the appliance still fails and the **FLASH FAIL** lamp and alarm come on, the product must be considered unsafe. It should be clearly marked to show this and withdrawn for full workshop investigation and repair. It must be **FULLY** re-tested again following repair.

## 6.9. Double Insulated (Class II) Equipment

This test requires the use of the safety Flash Test probe. This has a retractable tip which is exposed by depressing the red button on the handle.

The supply switch of the tool or appliance must be in the ON position to ensure that all 'live' parts are included when applying a Flash test. For contactor or electronic start products refer to the Earth Leakage section.

Ensure that the appliance is secured and positioned so as to allow access to the various test points.



## 6.10. Flash Test – Line+Neutral to Probe

Set the Test Selector to:

3000V LN Probe for routine testing

3750V LN Probe for repaired or reconditioned equipment (Where advised)



Do not allow bodily contact with the appliance, its supply lead or the flash probe tip, when the following tests are being applied.

Depress and hold the **PRESS TO TEST** button and apply the Flash Probe tip to all exposed metal surfaces, screw heads, casing joints and around switches and cable entries. In short, anywhere on the outer surface of the product that may become 'live' if an internal fault was present, i.e. loose strands of wire touching exposed metal or poking through body mouldings etc.



If, during testing, it becomes necessary to move the appliance for easier access to a test point – Remove the probe and release the test button first.

At each test point observe the **TEST RESULT** lamps, the green **FLASH PASS** lamp should be on, and remain on, to indicate that no flash-over has occurred at that point to which the probe tip is applied.

The Display will also indicate the test is in progress, until the button is released, at which point the display will show **HOLD** to indicate the test has finished. The result is held in the Pass or Fail state for a period of 5 seconds, or until the test is restarted or the dial position moved.

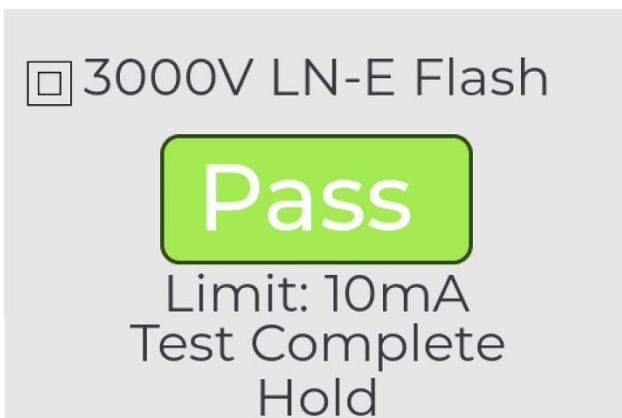


Figure 8: 3000V LN-E Flash Pass

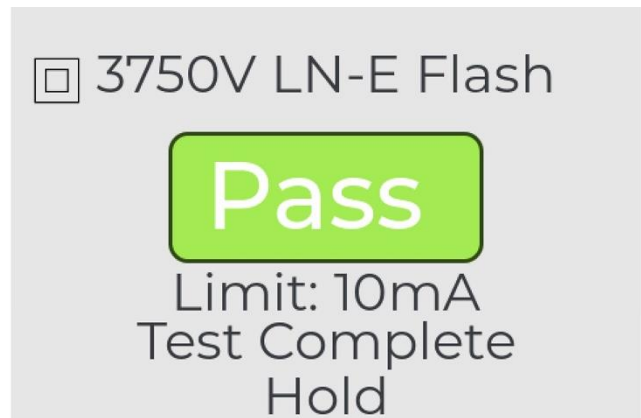


Figure 9: 3750V LN-E Flash Pass

If the Flash **FAIL** lamp and audible alarm come on, the insulation – between the Line or Neutral paths and the point of test – has failed to withstand the applied voltage.

The appliance must be considered unsafe. It should be clearly marked to show this and withdrawn for full workshop investigation and repair. It must be **FULLY** re-tested following repair.

**Note:** Certain equipment may have inherently higher leakages which require a pass level of up to 10mA at test voltage.

If this is the case and provided that the manufacturer advises testing this to a higher threshold, the 10mA Flash trip can be employed.



**Testing in this 10mA mode increases the hazard to the operator, remember - Do not touch the item under test.**

To apply the Flash Test using the increased trip threshold, first depress the red 10mA button and hold it in, then also depress the white **PRESS TO TEST** button for 5 seconds, in the normal way.

The digital readout will indicate the trip limit has been changed to 10mA.

The green **FLASH PASS** lamp should light. Release both buttons at the end of the 5 second test period.

If the appliance still fails and the **FLASH FAIL** lamp and alarm come on, the product must be considered unsafe. It should be clearly marked to show this and withdrawn for full workshop investigation and repair. It must be **FULLY** re-tested again following repair.

## 6.11. Protective Conductor Current (Earth Leakage) Test - (Class 1 Earthed/Grounded Products)

This test is intended as an alternative to the relevant Flash Test for equipment fitted with contactor, relay or low voltage 'electronic' start switching devices (often referred to as 'dead mans handles'), i.e. typically those products that require the mains voltage to be present **BEFORE** any function switches can operate. It is also advisable to perform this test on a product with surge protection or MOV where the application of Flash test voltage may trigger the surge protection device giving fails failure indications.



During the following test, the equipment being measured will be in its normal operating state. Power tools and rotating machinery must be made safe **BEFORE** starting the test – ensure that portable equipment is properly secure and that any moving parts are adequately guarded to prevent damage or injury.

Set the Test Selector to the Earth Leakage position and then depress & hold the **LOAD TEST** button.

Now operate the product function switch(es) for normal running - the Earth Leakage current will be displayed as both a digital readout and on the 0-5mA scale.

The leakage value must fall within the recommended pass / fail criteria as shown in the chart opposite.

Release product switches and the **LOAD TEST** button as soon as a reading has been taken.

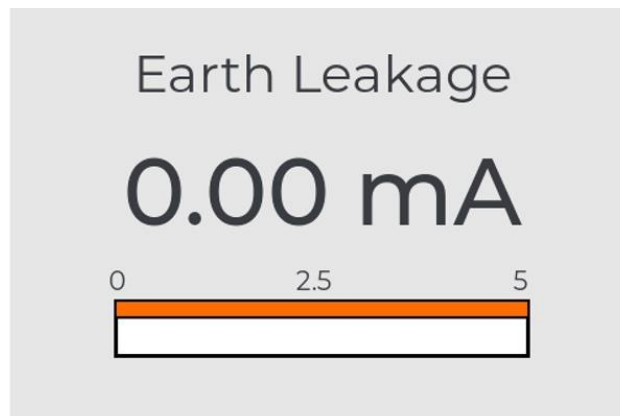


Figure 11: Earth Leakage

## 6.12. Touch Leakage Test (Class 2 Double Insulated Products)

This test is intended as an alternative to the relevant Flash Test for equipment fitted with contactor, relay or low voltage 'electronic' start switching devices (often referred to as 'dead mans handles'), i.e. typically those products that require the mains voltage to be present **BEFORE** any function switches can operate. It is also advisable to perform this test

on a product with surge protection or MOV where the application of Flash test voltage may trigger the surge protection device giving fails failure indications.

**Warning:** During the following test, the equipment being measured will be in its normal operating state. Power tools and rotating machinery must be made safe **BEFORE** starting the test - ensure that portable equipment is properly secure and that any moving parts are adequately guarded to prevent damage or injury.

Set the Test Selector to the Earth Leakage position, connect the green clip lead to the green banana socket on the test output box. Attach the clip end to the accessible metal of the item under test.

**Note:** Do not connect the clip to any moving parts. Depress & hold the **LOAD TEST** button.

Now operate the product function switch(es) for normal running - the Earth Leakage current will be displayed as both a digital readout and on the 0-5mA scale.

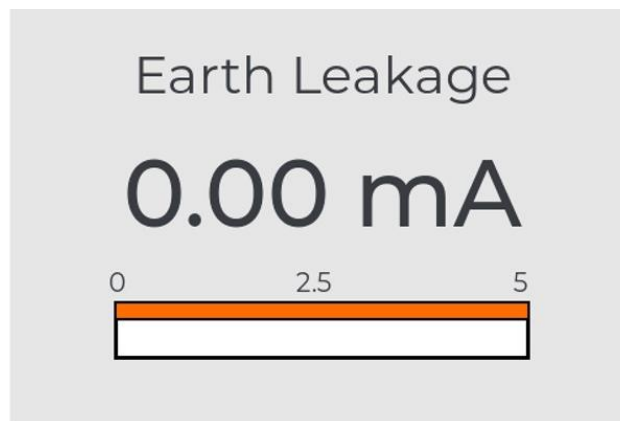


Figure 11: Earth Leakage

The leakage value must fall within the recommended pass / fail criteria as shown in the chart opposite.

Release product switches and the **LOAD TEST** button as soon as a reading has been taken.

**Maximum Leakage Values**

Type of Equipment	Maximum Leakage Values
Portable or Handheld Class I Equipment	0.75mA
Class I Heating Appliances	0.75mA or 0.75mA per kW, whichever is the greater, with a maximum of 5mA
Other Class I Equipment	3.5mA
Class II appliances	0.25mA

The values above are for guidance only, product specific values must be determined from manufacturer data.

### 6.13. Load (Run) Current Measurement

It is advisable to only apply a Load Test if the product has successfully undergone a Safety Test first.

Check that the product to be tested is connected to the correct test output socket for the supply voltage required – 230V or 110V – and for 110V products, that a suitable external supply source is connected to the instrument.

**Note:** For 230V appliances the maximum permissible load current is 15A and for 110V equipment the maximum measurable current is 25A, provided that the external supply is suitably rated.



Ensure that the appliance cannot move and is adequately guarded to prevent any hazard being caused by or to moving parts or heating elements during the application of the test supply voltage.

Set the Test Selector to any of the safety test ranges but **NOT** Earth Leakage.

Depress & hold the **LOAD TEST** button and then operate the product - allow sufficient time for the product to reach a steady state condition and then read the current being indicated on the digital display.

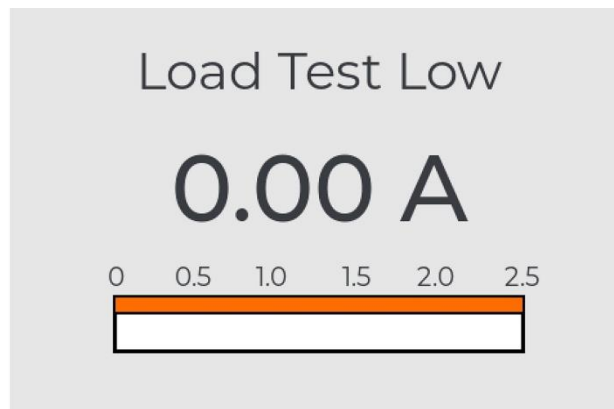


Figure 12: Load Test Low

To improve readability of low current values (below 2.5A), also depress the 2.5A button to expand the readout range.

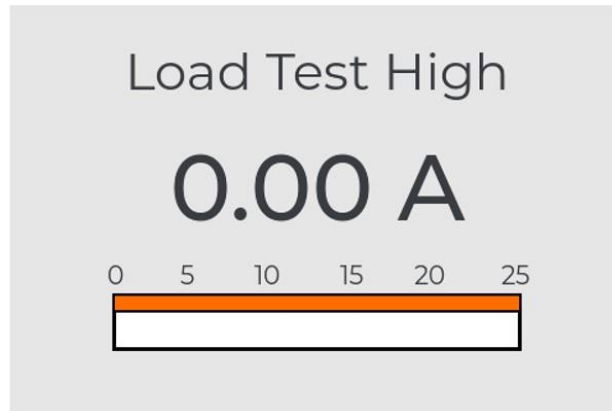


Figure 13: Load Test High

The indicated value should be within the limits specified, by the manufacturer, for off-load operation.

## 6.14. Fault Indication

A zero current reading and non-operation of the product may indicate an open circuit Line or Neutral path – release the test button first and check that switches on the product operate correctly.

If the switches appear to operate correctly, there may be a break in the supply lead and if this is the case any previous safety tests will be invalid. On the other hand, if any switches are not operating correctly, they may well have been **OFF** during the safety tests, again creating an invalid test. In either case complete re-testing will be required once the problem has been resolved.

A current in excess of the manufacturer's specifications may indicate, among other things, a short-circuit heating element, out of balance field coil windings, tight bearings or even a tight gear train.

A serious fault, such as a short circuit, will trip the **SUPPLY** MCB on the instrument or external supply and may even blow supply fuses. Disconnect the appliance before re-setting the MCB and check plug top and switch board fuses if the instrument **SUPPLY** lamp now fails to operate.

All suspected faults must be investigated and corrected by qualified personnel and the product **FULLY** re-tested.

## 7. Instrument Integrity

### 7.1. Calibration

Regulatory authorities require that test instruments are re-calibrated at least annually. Seaward Electronic Ltd offer a full calibration service for this instrument, although any other suitably approved test establishment can be used.

### 7.2. Operational Checks

As well as the instrument undergoing annual, or more frequent, re-calibration by qualified personnel.



The user must check the safety test circuits at regular intervals to determine the operational integrity.

The D255 is supplied with a **FAULT SIMULATOR** (model Y250) specifically for this purpose.

The simulator is designed for direct plug-in connection to the test output box using the 13A/230V Test Socket and, by applying the following series of simple check routines, can be used to check both Earth and Flash 'Safety' tests.

It is recommended that such operational checks are carried out at least weekly, if not daily before use.

**Note:** The Y250 must be kept with the instrument at all times and should be included in the full calibration programme.

**Maximum test time 5 seconds**

**Maximum test current 25A AC**

**Allow to cool for 5 minutes before re-test**



### 7.3. Check Procedure – Earth Continuity

Connect and set-up the Appliance Tester in the normal way and then plug the Y250 into the 13A test socket on the test output box.

Attach the Earth Return clip lead, from the tester, across **BOTH** of the metal tags on the simulator so that they are shorted together – **NOTE** do not permanently short these tags by bending them together or creating a soldered link.

Set the test selector to Earth Test, close the guard switch and depress the **PRESS TO TEST** push button for 3 seconds.

The instrument meter should indicate a value of approximately 0.2 Ohms. Release the button.



## 7.4. Check Procedure - Flash Test Trips



Electric shock risk. Do not touch D255 and Y250 during flash tests.

With the clip lead still attached across the simulator terminals, select 500v Flash and depress the Test button. The green Flash **PASS** lamp should come on. Release the Test button.

Now select 1250v Flash and depress the Test button. This time the warning buzzer and the red Flash **FAIL** indicators should come on continuously. Release the Test button.

With 1250v Flash still selected, now depress and hold the 10mA **TRIP** button and then depress the Test button. This time the green Flash **PASS** indicators should come on. Release both buttons.

Detach and put away the Earth Return clip lead and get the safety Flash Probe out ready for the next check.

Set the test selector to 3000v Flash, depress and hold the Test button and note that the green Flash **PASS** indicators come on.

With the Test button still depressed, apply the tip of the safety Flash Probe to the **HT PROBE** test point on the simulator, the warning buzzer and the red Flash **FAIL** indicators should come on continuously. Release the Test button.

Set the test selector to 3750v Flash, depress and hold the Test button and note that the red Flash **FAIL** indicator comes on.

## 7.5. Check Procedure – Instrument Operation

### Interlock functionality test check:

- Disconnect Guard Switch from the socket located at the rear panel. Make sure the output box is plugged into the D255.
- Make sure the selector switch is set to Stand By position. Set-up test as per Earth Continuity - Check Procedure.
- Switch D255 on.
- Select Earth Continuity test, using the rotary selector switch. Depress Test button in order to start the test.
- Make sure the test doesn't start and the reading on the scale remains at 0 position.

Only if the above test is successful perform the following test:

- Connect Guard Switch link (provided).
- Disconnect the output box.
- Make sure the selector switch is set to Stand By position. Switch D255 on.
- Select Earth test, using the rotary selector switch.
- Depress Test button in order to start the test
- Make sure the test doesn't start and the reading on the scale remains at 0 position.



**Do not select any other test functionality but Earth Test.**

## 8. Specifications

### 8.1. Technical Specifications

#### Earth Continuity Test

Display Range	0Ω to >2 Ω
Measured Range	0 to 1Ω
Accuracy	(+/-10% +0.02) of the reading
Duration	Unlimited
Recommended Duration	up to 5 seconds, 2 per minute intervals
Current	up to 25A into 0.1Ω

#### 500V Flash Test

Voltage	500v AC, +/-10%
Trip Current	5mA, 10mA
Duration	Unlimited
Recommended Duration	up to 5 seconds

#### 1250V Flash Test:

Voltage	1250V AC, +/-10%
Trip Current	5mA, 10mA
Duration	Unlimited
Recommended Duration:	up to 5 seconds

#### 3000V Flash Test:

Voltage	3000V AC, +/-10%
Trip Current	5mA
Duration	Unlimited
Recommended Duration	up to 5 seconds

#### 3750V Flash Test

Voltage	3750V AC, +/-10%
Trip Current	5mA
Duration	Unlimited
Recommended Duration	up to 5 seconds

#### Load Test

Display Range	0 to 25A
Accuracy	+/-5% full scale
Voltage	230V or 110V, 50/60Hz
Test Current	up to 15A @ 230V, up to 16A @ 110V
Duration	Unlimited

#### Leakage Test

Display Range	0 to 5mA
Accuracy	+/-5% full scale
Voltage	230V or 110V, 50/60Hz
Duration	Unlimited

## 9. Maintenance



Under no circumstances should the enclosure covers be removed.

Ensure the D255 is kept dry with no surface moisture on either the enclosure or cable assemblies.

The D255 enclosure should be regularly inspected to ensure no deep scratches or physical damage has occurred.

The D255 cable assemblies and accessories should be regularly inspected to ensure no deep scratches or physical damage has occurred.

If any of the above conditions have been observed, then the D255 must be disconnected from any test or measurement functional testing and secured to prevent any further use.

## 10. Cleaning

Clean the external case of the D255 with a clean dry cloth.

Avoid using solvents and abrasive scouring agents to clean the external case of the D255.

## 11. Additional Information

### 11.1. Useful Reference Material

The following short list of British Standards, Legislative Documents and Guidance Notes is intended as a pointer to reference material that will assist in a greater understanding of the whys and wherefores of Electrical Safety Testing.

References made to such documents within this Manual are for guidance and illustration only and as such are generalised interpretations of the spirit of the various regulations. If any conflict arises from the text of this manual then the relevant Standards or Legislation must take precedence.

#### Statutory Legislation:

The Health and Safety At Work Act 1974

The Electricity At Work Regulation 1989

#### British Standards:

BS EN 62841-1 Electric motor-operated hand-held tools, transportable tools and lawn and garden machinery.

BS EN 60335-1 Safety of Household and similar electrical appliances

#### Codes of Practice:

HAE EHA Guidance on Electrical Safety Testing in the Hire Industry

## 11.2. Training

The Seaward Training Department have formulated a variety of courses covering all aspects of Electrical Safety Testing – from choosing the right equipment, to safe test areas, to meaningful test application etc.

Courses are generally designed to be held at the customer's facility and include comprehensive course notes and practical demonstrations, with all trainees participating in 'hands-on' practical sessions.

For more information, please visit [seaward.com/training](http://seaward.com/training)

## 14.1. Contact Us

### Sales and Delivery enquiries

Tel: +44 (0) 191 586 3511

Fax: +44 (0) 191 586 0227

Email: [sales@seaward.com](mailto:sales@seaward.com)

### Service, Calibration and Repair

Tel: +44 (0) 191 587 8739

Fax: +44 (0) 191 518 4666

Email: [info@calibrationhouse.com](mailto:info@calibrationhouse.com)

### Seaward Electronic Ltd.

15 - 18 Bracken Hill

South West Industrial Estate

Peterlee

County Durham

SR8 2SW

United Kingdom



**SEAWARD**

TESTED, TRUSTED... WORLDWIDE.

465A553 Rev 2