



## Can you test 110V appliances?

If you are using a standard Seaward 230V 3 pin to 110V adaptor then you can only perform the Earth Continuity and Insulation tests (on class 1 equipment) or Insulation tests (on class 2 equipment).

Note 1: The live and neutral are wired together within the plug to prevent the adaptor being used to power 110v equipment with a 240v supply.

Note 2: The only test that the adaptor will not allow is the polarity test. This however is covered by the visual test as there are no moulded plugs for 110V.

If you require more help, please contact us at <https://www.seaward.com/gb/enquire/>.