

# How to upload to the PrimeTest 350 from PATGuard 2?

The PATGuard Upload feature can be used to transfer Asset information to a Seaward PrimeTest 350 to simplify retesting. Information including the Asset ID Asset ID, Description, TestSequence Sequence, Site and Location can be uploaded from PATGuard into the PrimeTest 350.

When an Asset ID is entered on PrimeTest 350 Asset Details screen, the assets stored in upload memory are automatically searched for a matching Asset ID Asset ID. If a match is found the uploaded asset data is retrieved and shown on the PrimeTest 350 display.

# Preparing PATGuard for Upload

1) On the tree view on the left hand side of the screen, decide the level at which assets are to be uploaded i.e. all assets for a Client, Site or Location.

2) In the example below, the Client (Seaward) has four Sites(Bristol Factory, Durham Factory, London Factory and Newcastle) and the Durham Factory Site has been selected. This Site has seven Locations (Office 1, Office 2, Office 3, Office 4, Reception, Store Room and Workshop).



**Note:** The Upload Site and Upload Locations only upload the Site or Location names (these appear in the oad the Site or Location names (these appear in the list of Site list of Sites or Locations on the test instruments) and not the Assets in the Site or Location. ts in the Site or Location.

3) Right click on the icon at the required level and select Upload Assets. In the example below, all assets in the Durham Factory Site will be uploaded.

PATGuard El	ite Demo			
File Edit View To	ols Help 🕉 🖏 🛷 🕐 🎌			
<ul> <li>□ □ D:\Documents a</li> <li>○ Recycled</li> <li>□ ○ Seaward</li> <li>□ ○ Bristol Fa</li> <li>□ ○ Durham</li> <li>□ ○ Offic</li> <li>□ ○</li></ul>	Add Location Add Location Add Asset Add Visual Test Pass Auto Scheduler Create Test Sequences Upload Site Upload Locations	ments\jir	Description Add Location Add Asset Office 1 Office 2 Office 3 Office 4 Reception Store Room Workshop	Asset ID
< %	Rename Details Print Test Certificates Send To	F2 F8		
Add	Delete	Del		

4) In this example, only the Assets in Location Office 1 will be uploaded.

Upload	2
Destination: COM Port:	Seaward PrimeTest 350 ABC123 Seaward Supernova Plus DEF123 Seaward PrimeTest 350 ABC123 PDA
Visual only	OK Cancel

5) When the Upload window appears, select the relevant Seaward test instrument from the drop down list.

PATGuard E	lite Demo			
File Edit View To	ools Help 30 1% 47 ? №?			
	and Settings\JimW\My Doc actory Factory Add Asset Add Visual Test Pass Auto Scheduler Create Test Sequences Upload Location Upload Assets	uments\jir	Description 0 <sup>®</sup> Add Asset 0 <sup>®</sup> Extension lead 0 <sup>®</sup> Extension lead 0 <sup>®</sup> Extension lead 0 <sup>®</sup> Monitor 0 <sup>®</sup> Monitor 0 <sup>®</sup> Monitor 0 <sup>®</sup> PC 0 <sup>®</sup> PC 0 <sup>®</sup> Photocopier 0 <sup>®</sup> Printer 0 <sup>®</sup> Printer	Asset ID A001035 A001037 A001030 A001030 A001031 A001036 A001032 A001034 A001038 A001033 A001039
<	Rename Details Print Test Certificates Send To Delete	F2 F8 Del		

Note: Only instruments shown in the PATGuard Test Instruments tab will appear in the drop down list. nstruments tab will appear in the drop down list.

# PrimeTest 350 is not shown on the Destination drop down list down list

If a PrimeTest 350 is not shown in the list of available instruments it should be added used the Add Test Instrument option in the Test Instruments tab on the bottom right hand side of the PATGuard display

When adding a new test instrument, it must be selec When adding a new test instrument, it must be selected from the drop down list. Do not simply t ted from the drop down list. Do not simply type in the tester instrument the tester instrument name.



6) PATGuard is now ready to send data to the Seaward test instrument. Do not press OK until the PrimeTest 350 has been set to receive the upload.

PATG	uard			
1	Ensure the tester is s	et for Upload and	connected to the PC. Press	OK when ready to :
		ОК	Cancel	

#### Setting the PrimeTest 350 to receive an Upload

1) Select Menu (F4), Data Transfer, Upload from PC

$R_{\mathtt{PE}}$	₽	_		
<u>A</u> uto Mo <u>M</u> anual	ode Mode >	Durat	tion 5 s imit 0 10	ohm
Data T ⊻iew S Memor Configu User C About	Download <mark>Upload fr</mark> Send/Red Load TnT <u>C</u> lone Da	l to PC om PC ceive Conf Logo ta	fig Data	Ω
Help	Esc		ОК	

2) Check that the correct setting is shown in the Computer field i.e. RS-232 when using a cable connection or the PC name when using Bluetooth.

Upload from PC						
	Computer RS-232					
	Baud 57600 <>					
	No. of a	ssets				
Connect	Connected					
	_					
	Esc					

## **Uploading Data**

1) Press OK on the PATGuard Upload window to start uploading data.

2) A progress bar will appear on the PATGuard screen to show the data transfer

Upload		×
Uploading		
	8%	
	Cancel	

15-18 Bracken Hill, South West Industrial Estate, Peterlee, County Durham, SR8 2SW, United Kingdom t: +44 (0) 191 586 3511 | f: +44 (0) 191 586 0227 | e: sales@seaward.com seaward.com 3) The Asset ID numbers will appear on the PrimeTest 350 display as they arrive until Upload is complete and the End of Data message appears below the last Asset ID.

Upload from PC Computer RS-232					
	No. of assets	70			
A001002 A001001 End of Data					
	Esc				

The total number of Assets uploaded will be shown in the No. of assets field – in this case 70 Assets have been uploaded.

## Viewing Uploaded Assets Viewing Uploaded Assets

1) The number of Assets in upload memory can be view be selecting Menu (F4) then Memory Options.

$R_{\text{PE}}$	₽			0
		-Memor	у	
	I	No. of as	sets (	ם 🛛
Space available (%) 97.9				
	А	ssets Del	eted (	ם 🛛
	Ass	sets Uploa	aded 189	3
	Esc	Erase		
	Esc	Erase		

In this case there are a total of 189 Assets in the upload memory.

2) The Assets in upload memory can be viewed using the View Saved Data option on the PrimeTest 350 as follows. Press Menu (F4), View Saved Data, Search (F1) and change the Test Status field to Uploaded as shown.



3) Press OK (F4) to show all Assets in the upload memory. Uploaded Assets are marked with a "U" on the right hand side of the display.

Π		Vie	w Saved	Data	)	
11	<u></u>	<u>Search Re</u>	sults	(189 / 0	))	
	A00	1068	Durhar	m Fact	U	
	A00	1067	Durhar	n Fact	U	
	A00	1066	Durhar	n Fact	U	
	A00	1065	Durhar	m Fact	U	
	A00	1064	Durhar	n Fact	U	
	A00	1063	Durhar	n Fact	U	
Ş	Search	Esc	Options	Select		

## **Retesting Uploaded Assets Retesting Uploaded Assets**

- 1) Press Menu (F4) and select Auto Mode Auto Mode
- 2) In the Asset Details field, enter the Asset ID of an item uploaded for retest



3) Press Re-test (F3) to show the Last Test Details Last Test Details



4) The uploaded Asset information, including Site, Location and Test sequence are shown.

5) Press Re-test (F4) to begin the test sequence.

If you require more help, please contact us at https://www.seaward.com/de/enquire/.