



**SEAWARD**  
ELECTRICAL SAFETY TESTING  
& MEASURING.

## What does the “STOP” message indicate on the PrimeTest 250?

When performing a powered leakage test on the PT250

With the power lead connected you have to make sure you select the “LKGE” button when ready to perform the “ILEAK” test – if not, the instrument will display “STOP” and not complete the test.

*Note if the unit is not plugged into the mains it will automatically perform the battery powered Substitute Leakage test at 40Vac.*

If you require more help, please contact us at

<https://www.seaward.com/gb/enquire/>.