



SEAWARD
ELECTRICAL SAFETY TESTING
& MEASURING.

There's no figure for Irradiance showing on my Survey 200R, just three lines?

The Survey 200R can only read Irradiance above $100\text{w}/\text{m}^2$. Below this level, the display will read "--". Usual cause of this is bad weather or heavy cloud. If it's a bright day, replace batteries and re-check.

If you require more help, please contact us at <https://www.seaward.com/sitemap/enquire/>.