




**SEAWARD**  
ELECTRICAL SAFETY TESTING  
& MEASURING.

## What cables do I need to connect a HAL to a PC and a printer?

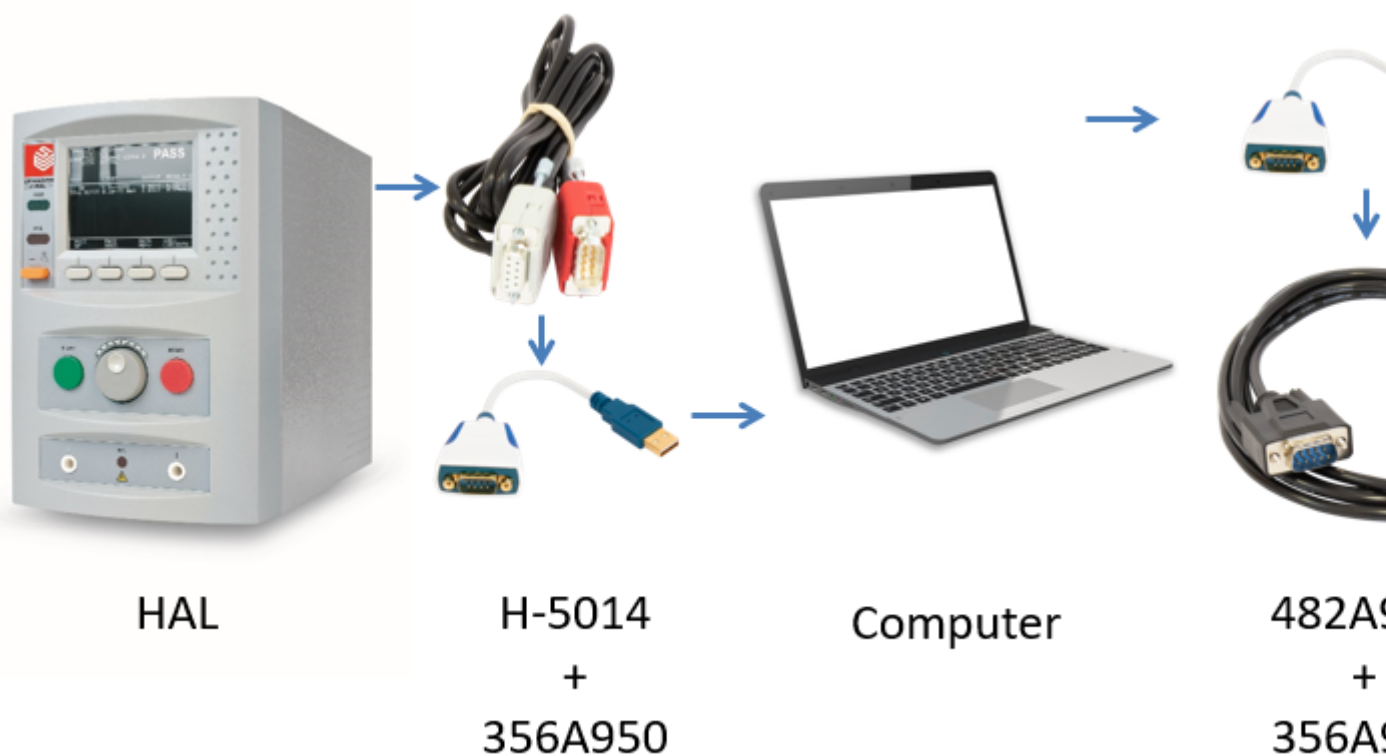

You will need all of the above cables to connect a HAL to a PC and a printer at the same time. If your PC has serial ports, you may not need the USB adaptors.

If you require more help, please contact us at <https://www.seaward.com/gb/enquire/>.