



I cannot modify the voltage limits in the SC08, why is that?

The SafeCheck 8 is designed to test the level required by the hire industry, the tests are programmed in to ensure that the correct parameters are applied.

If you need to be able to alter these limits or are testing to a different standard. We suggest you get in touch with us at sales@seaward.com to discuss the options we have available for you.

If you require more help, please contact us at <https://www.seaward.com/cms/enquire/>.