



SEAWARD

GMC-INSTRUMENTS GROUP

I've paired my PV 150 and my Survey 200R, but can't see the Irradiance on the PV 150?

Put the Survey 200R into "transmit" mode, by holding down button 1 and 4 together on the Survey 200R, to get a flashing triangle in the bottom left corner of the Survey 200R display. As long as the testers are in range, and the Irradiance is greater than 100w/m² it will appear in the top right corner of the PV 150 display.

If you require more help, please contact us at <https://www.seaward.com/us/enquire/>.