

How can I add a signature into a report/test certificate in PATGuard 3?

1. Create a file of the desired signature.

2. Save the file as a 'bmp', 'tif' or 'jpg'.

3. Select from the reports section the report you want to add the signature to and right click on it.

lie Edit Vew Tools Help Tryotherprog						
CliSeward/Demo database.mdb But.D1Mc10 ClARE CL	Description Add Clent Add Ste Dackson Citil Herkage Hous. Differ Differ State Differ State Differ State Differ State Add Ste Differ State Add Add Add Add Add Add Add Add Add Add		Last Tested	Next Test	Last Visual	Next Vioual
Arset Bercode List Concise Asset D Bercod. Electrone List Tert List Dharges Clert Details	Personnel Short Code Detaile	Concise Tank Decisio Decksist Decisio Decksist Decision Site Details Ter Security Security	Tack Concise Latect C Sat Test Results	Concise Test History Certificates	Detailed Later Test Provide Histor	Test Test
Personnel Test Instruments Reports				1997	Help, press F1	

4. From the drop down list select 'copy'.

5. In the box that now appears enter a name for the new report.

Copy R	Penort		
<u>R</u> eport Name:	Copy Report		
		ОК	Cancel
PATGuardElit	e 🔀		
Repo	rt successfully copied.		
	ок		

6. Select from the reports section the copy report just created.

7. Right click on the copy report.

8.From the drop down list select 'Edit'.

Note: The Edit option will not be available if the PATGuard user account does not have Edit permissions. An Admin PATGuard user can check other users' permissions in Tools->User Accounts.

) 📽 🤍 🕾 🗶 🛯	6 🐠 🤨 Ki						
ClisewardDeepo databas But.DINGIO But.DINGIO CAAR CAAR		Description 24 Add Clent. 24 Add Clent. 25 Add Stell 25 Add Stell 25 STES 26 Heritoge Hous 25 STES 26 Heritoge Hous 26 Heritoge Hous 27 Add Stell 27 Add Stell 28 A	Asset ID	Last Tested	Next Test	Last Visual	Nex: t Visual
Bacod.	List	ed Asset List Baccoded Tack Checklas Details Personnel Details	Concise Task Direckier Direckier Direckier Direckie Direckie Direckie Direckie She Deta	<u>ت</u>	onciae Test History Certificates	Copy Report Database Copy Delate Restore Prict Prict Preve	History
Personnel Test Instruments Presented Personnel Test Instruments	sports				Po	Help, press F1	


9.. This will open the report in edit mode.

10.In the centre panel at the bottom are three tabs 'Layout', 'Layout Preview' and 'Preview'.

11.Select 'Layout' and the centre panel will show the layout view.

Designer						
Ble Edit Broject Objects Yow]						
Image: Construction Image: Construction	2 0 2 10 2 10 2 10 2 10 2 10 2 10 2 10	50	100 		 250 m	Let of variables X + (a) Variables + (b) Point variables + (b) Fields
Cobjects Layers Preview Properties 24	• ×					
	250 200					
23.7, 302.3 Select	nothing selected	Biayout Superior	Freiden Part	φu		-


12. Down the left hand side are icons and one of these is the 'Picture' icon.

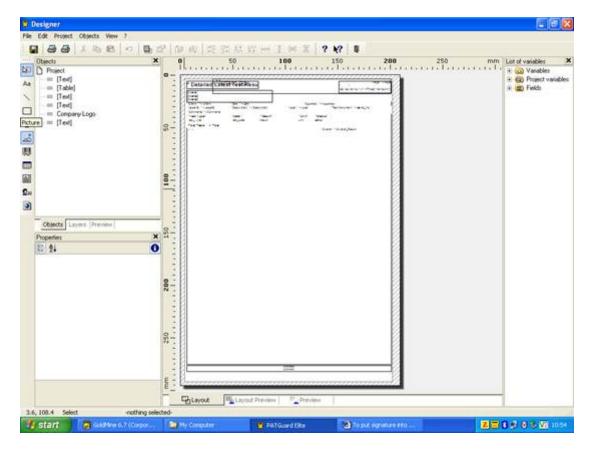

13. Select this icon and move your mouse over the centre panel.

15-18 Bracken Hill, South West Industrial Estate, Peterlee, County Durham, SR8 2SW, United Kingdom t: +44 (0) 191 586 3511 | f: +44 (0) 191 586 0227 | e: sales@seaward.com seaward.com 14. When the mouse is over the layout view the mouse pointer becomes a target cross.

15. By holding down the left mouse button a box is created by dragging the mouse across the display.

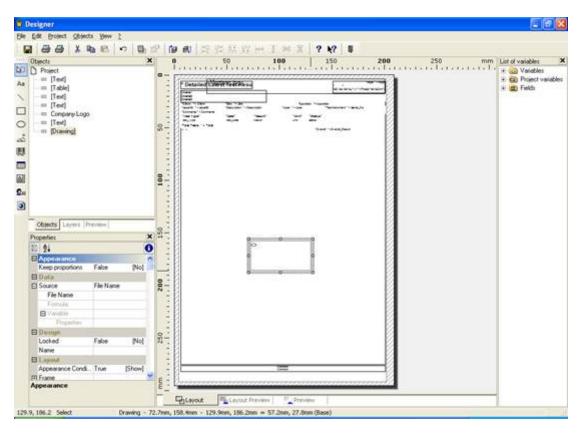

16. The property table for this box appears in the bottom left corner.

17. In this box under 'Data' and 'Source' there is the 'Filename' box.

Edit Brownet Object	A COLUMN TWO IS NOT			0 CE 95 AX 17		≍ ? \? U	200	250 mm	List of variables
Poiect [Ted] [Tidle] [Tid	ĸ			etailed Lawor Year Piers		La construction de la construcción la construcción de la construcción de la construcción de la construcción de la construcción de la construcción		and an	F 22 Valable 9 G2 Poert valab 9 g2 Field
Cobjects Layers P Properties 20 24 Approximation Keep proportions Costa Source Flowshap Vandate	False File Nam	[No]		0	0	0 0 7			
Denign Locked	False	[No]	250						
Name El Layout Appearance Condi	True	[Show]			1000		_		
File Name Source.File Name File name				ayout 🖳 Layout I		Teview			

18. Click in this box and on the right hand side the browse icon appears.

19. Click the icon and the browse box appears on the screen.

File Name	


)pen	Otech: Yes 1			250 mm List of validates >
Look n My Recent Documents Desktop	PATGuard Elite eManager Evaluations Prive Test Reports SNEU Viewer 2 pdR oemsplash.bmp	- + b dt	Enbed in project.	+ + + + + + + + + + + + + + + + + + +
My Documents My Computer My Network Places	Commanders 400 Type: Binage Im Sce: 168 KB File name: Files of type: All picture 1		Open Cancel Help	
B Design Locked Name B Layout	Fabe (No) e CondiTrue (Show)	250 200	2000	

20. In the browse change the 'Look in' to the correct folder for your signature file.

21. On the screen your file should appear which you select.

en 👘						2
Look jn	PATGuard	Elite	•	- •]-	
My Recent Documents Desktop	eManager Evaluations PrimeTest Reports SNEU Viewer zipdl oemsplash.b					Signature
My Documents My Computer	Ty	ensions: 211 x 75 be: Bitmap Image e: 2.11 KB		-	Open	
My Network	Files of type:	All picture formats		•	Cancel	<u>,</u>
Places					Help	

22. Click the open button and the file name is put into the box.

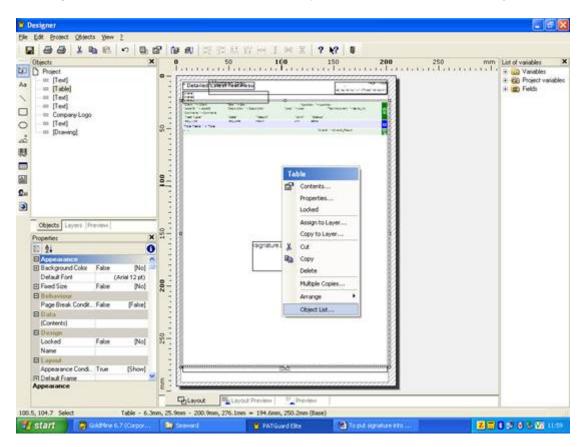

23. Right in the middle of the centre panel and select the 'Object List'.

24. The 'Object List' box appears on the screen.

Object List		
Objects:	C.	₽ × ◆ ◆
Text (6.0mm, 6.3mm, 74.1mm, 13.2mm) Table (6.3mm, 25.9mm, 200.9mm, 276.1mm) Text (151.1mm, 6.3mm, 200.9mm, 17.7mm) Text (6.3mm, 276.9mm, 200.9mm, 282.8mm) Company Logo Text (6.3mm, 15.2mm, 87.8mm, 26.1mm) Drawing (72.7mm, 158.4mm, 129.9mm, 186.2mm)		
Object name: Table (6.3mm, 25.9mm, 2	00.9mm, 276.1mm)	<- Default
	Link with	Detach link
Interlink Type Vertical Interlink Horizon	ntal Interlink	
 Sequential Individual Size and Position Adaption Type: The object adaption can be modif At End, Keep Size 	ied by the other two dialog subpage	35
2	ОК	Cancel

25.Click on the 'Link with' button to get the 'Object link' box.

🖀 Link Object 🛛 🛛 🔀
Unlinked objects:
Text (6.0mm, 6.3mm, 74.1mm, 13.2mm) Text (151.1mm, 6.3mm, 200.9mm, 17.7mm) Text (6.3mm, 276.9mm, 200.9mm, 282.8mm) Company Logo Text (6.3mm, 15.2mm, 87.8mm, 26.1mm) Drawing (72.7mm, 158.4mm, 129.9mm, 186.2mm)
Choose the object(s) to be linked to the objects that you selected a moment ago.
OK Cancel

26.In this box select the line 'Drawing (..)' and click 'OK'.

15-18 Bracken Hill, South West Industrial Estate, Peterlee, County Durham, SR8 2SW, United Kingdom t: +44 (0) 191 586 3511 | f: +44 (0) 191 586 0227 | e: sales@seaward.com seaward.com (This will put the signature at the end of the report. To put the signature at the end of each certificate select 'Table').

🖥 Link Object 🛛 🔯
<u>Unlinked objects:</u> Text (6.0mm, 6.3mm, 74.1mm, 13.2mm) Text (151.1mm, 6.3mm, 200.9mm, 17.7mm) Text (6.3mm, 276.9mm, 200.9mm, 282.8mm) Company Logo Text (6.3mm, 15.2mm, 87.8mm, 26.1mm) Drawing (72.7mm, 158.4mm, 129.9mm, 186.2mm)
Choose the object(s) to be linked to the objects that you selected a moment ago.

27. This returns you to the 'Object List'.

28. In the object list are all the lines for the areas on the printed page.

29. The line with 'Table' should be highlighted.

30.Under this is the drawing line.

31.Highlight the drawing line.

Object List			
Objects:	r	×	4 - 17
Text (6.0mm, 6.3mm, 74.1mm, 13.2mm) Table (6.3mm, 25.9mm, 200.9mm, 276.1mm) L += Drawing (72.7mm, 158.4mm, 129.9mm, 186.2mm) Text (151.1mm, 6.3mm, 200.9mm, 17.7mm) Text (6.3mm, 276.9mm, 200.9mm, 282.8mm) Company Logo Text (6.3mm, 15.2mm, 87.8mm, 26.1mm)			
Chiest same		_	
Object name: Drawing (72.7mm, 158.4mm, 129.9mm, 186.2mm) Locked Link with		 Detacl	De <u>f</u> ault h link
Interlink Type Vertical Interlink Horizontal Interlink			
 Sequential Individual Size and Position Adaption Type: At End, Keep Size Base object: Table (6.3mm, 25.9mm, 200.9mm, 276.1mm) 			
Image: Contract Contract Contract Contract Image: Contrat Image: Contract Image: Contrac			Cancel

- 32. At the bottom of this box click on "At End, Keep Size".
- 33. Click 'OK' and exit the edit mode.
- 34. The signature is now set up for use with this report.

If you require more help, please contact us at https://www.seaward.com/gb/enquire/.