




How do I activate PATGuard 3?

This how to guide is to help if you are trying to activate PATGuard 3. Once you have installed PATGuard 3 you will see the Activation screen. You can choose to either Activate PATGuard 3 or continue using the 30 day [Evaluation Period](#) .

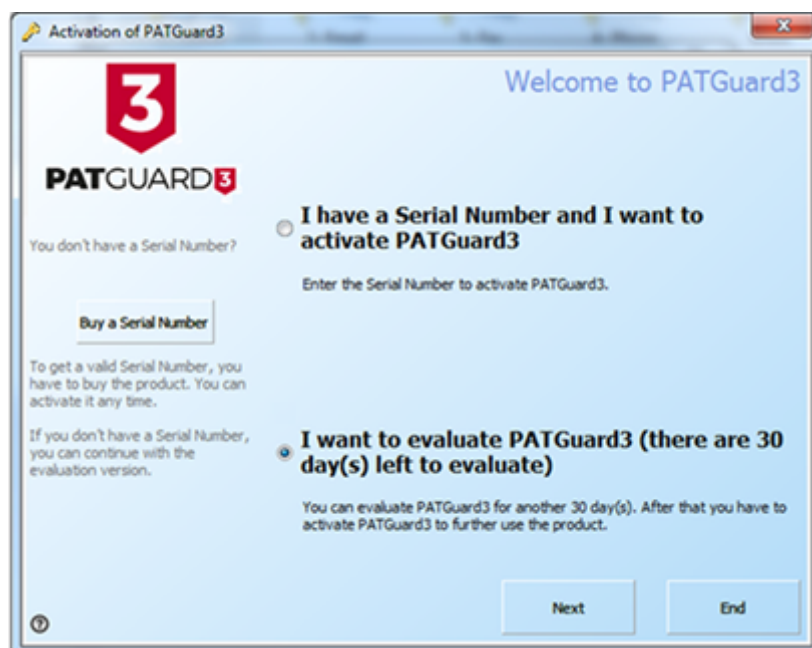

If you have already purchased PATGuard 3 and wish to activate it now you can choose to:

[- Activate Online](#)

[- Activate by Email or Fax](#)

You will need to have your serial number available to activate PATGuard 3. If you do not have a serial number, you can select Buy a Serial Number to

purchase one.

You can also choose to make use of the 30-day [Evaluation Period](#) and activate PATGuard 3 later.

Activate Online

1. To activate PATGuard 3 online, select I have a Serial Number and I want to activate PATGuard 3 and click Next on the Activation screen. You will need to have your serial number available to activate PATGuard 3. If you do not have a serial number, you can select Buy a Serial Number to purchase one.

2. Select Online Activation on the following screen and click next.



Activation Screen 1

3. Enter your details on the following screen and click next. Note, if you have an electronic version of your Serial Number (for example in an email) it is easier if you copy and paste to enter this.

Activation of PATGuard3

Please enter the activation data

3
PATGUARD 3

Please enter all required information for the activation process.

Serial Number
[Where do you find your Serial Number?](#)

Customer Number

Company

Salutation

First Name

Last Name

Country

E-Mail Address

Back Next End

Activation Screen 2

4. PATGuard 3 is now ready to be activated. If you use a proxy server to access the internet you will need to enter these details on the following screen by clicking Change Proxy Settings (only for expert users). See [Entering Proxy Server details](#) if required, otherwise click next.

Activation of PATGuard3

3
PATGUARD 3

Online Activation

PATGuard3 will now be activated by online activation.

To process the activation, data has to be sent to the Activation Service. Please make sure that an Internet connection is available.

[Change Proxy Settings \(only for expert users\)](#)

Back Next End


Activation Screen 3

5. PATGuard 3 will now connect to the Activation Service.



Activation Screen 4

6. The following screen will be displayed when Activation is completed successfully. Generally, you will not need to enter multiple Activation Keys. Click next or End to close the Activation Screen.

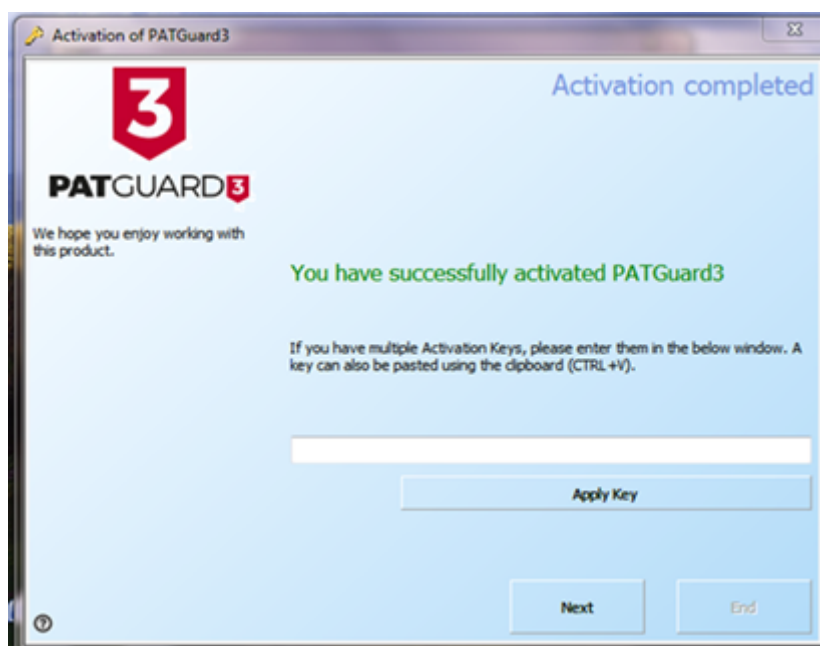


Activation Screen 5

Entering Proxy Server Details

1. If you use a Proxy Server to access the internet, you will need to enter these details into the activation screen. Select Change Proxy Settings (only

for expert users). By default the Proxy Server settings will be the same as those set in Internet Explorer. To change the Proxy Server settings, select Use Proxy Server and enter the details in the Proxy Server and Proxy Port boxes.

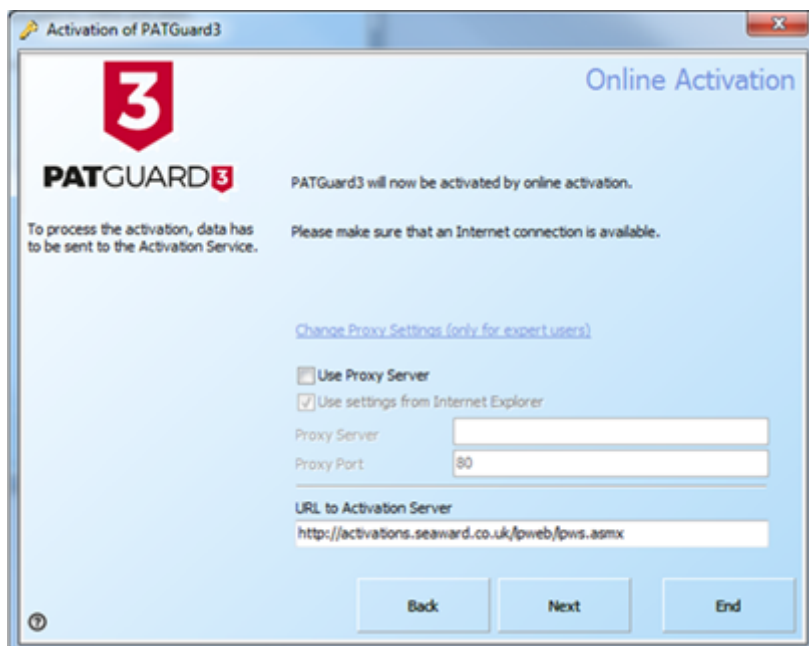

Proxy server details

Activate by Email or Fax

1. The quickest way to activate PATGuard 3 is to [Activate Online](#). However if you do not have an internet connection, you may choose to Activate by Email or Fax. Please note online activations happen immediately, whereas other activations will take much longer as they do not happen immediately.

2. To activate PATGuard 3 by Email or Fax, select I have a Serial Number and I want to activate PATGuard 3 and click next on the Activation screen. You will need to have your serial number available to activate PATGuard 3. If you do not have a serial number, you can select Buy a Serial Number or contact Seaward or your Distributor to purchase one.



Activation Screen 1

3. Select E-Mail Activation or Fax Activation on the following screen and click next.



Activation Screen 2

4. Enter your details on the following screen and click next. Note, if you have an electronic version of your Serial Number (for example in an email) it is easier if you copy and paste to enter this.

Activation of PATGuard3

3
PATGUARD 3

Please enter all required information for the activation process.

Serial Number

[Where do you find your Serial Number?](#)

Customer Number

Company

Salutation

First Name

Last Name

Country

E-Mail Address

Back Next End

Activation Screen 3

4. Follow the instructions provided to finish the activation process. Unlike Activating Online, you will be provided with an Activation Key that you will need to enter to complete the process.

Evaluation Period

1. PATGuard 3 can be used as a free trial for a period of 30 days. During the Evaluation Period the activation screen will open when you start PATGuard 3 and will display the number of days left in the Evaluation Period.

Activation of PATGuard3

3
PATGUARD 3

Welcome to PATGuard3

You don't have a Serial Number?

To get a valid Serial Number, you have to buy the product. You can activate it any time.

If you don't have a Serial Number, you can continue with the evaluation version.

I have a Serial Number and I want to activate PATGuard3

Enter the Serial Number to activate PATGuard3.

I want to evaluate PATGuard3 (there are 30 day(s) left to evaluate)

You can evaluate PATGuard3 for another 30 day(s). After that you have to activate PATGuard3 to further use the product.

Next End

Activation Screen - Evaluation

2. Once the evaluation period is over PATGuard 3 will revert to a read-only mode and you will not be able to add to or amend the database until you Activate PATGuard 3

3. If you have already purchased PATGuard 3 and wish to activate it now you can choose to:

[- Activate Online](#)

[- Activate by Email or Fax](#)

If you require more help, please contact us at
<https://www.seaward.com/login/enquire/>.